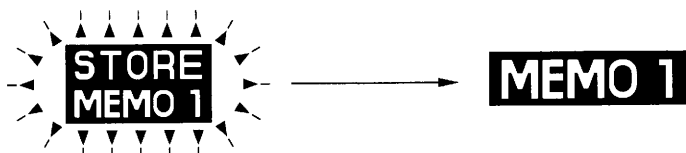

Storing Pre-load Into the Memory

You may store two selected adjustments in “MEMO 1” or “MEMO 2”.

1. Adjust the pre-load to the desired position.
2. Push and hold the MEMO 1 or MEMO 2 button until “STORE MEMO 1” or “STORE MEMO 2” blinks in the multi-display. When the blinking stops, the current position is stored in memory.

Storing

Stored

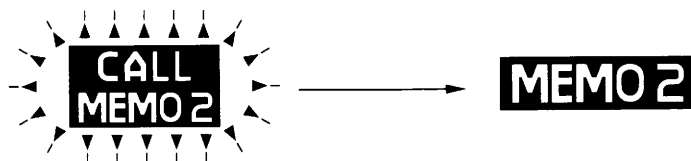


Selecting the Memorized Position

- Push the MEMO (1 or 2) button to select the memorized position. “CALL MEMO 1” or “CALL MEMO 2” will blink. When the position is selected, “MEMO 1” or “MEMO 2” will turn on.

Calling

Called



Pushing the rear spring pre-load switch or the MEMO (1 or 2) button while selecting a memorized position will cancel the calling procedure.