

# FEATURES

## (Not required for operation)

---

### VOLUME Control:

- To increase the volume — push the VOLUME lever up or turn the VOLUME knob clockwise.
- To decrease the volume — push the VOLUME lever down or turn the VOLUME knob counterclockwise.

To increase or decrease the volume rapidly — push the VOLUME lever up or down and hold it down after you hear a beep.

(VOLUME level range : from 0 to 32)

