


FEATURES

(Not required for operation)

AF Lever

To turn the AF on – push the AF lever up, “AF” will light on the display.
To turn the AF off – push the AF lever up again.

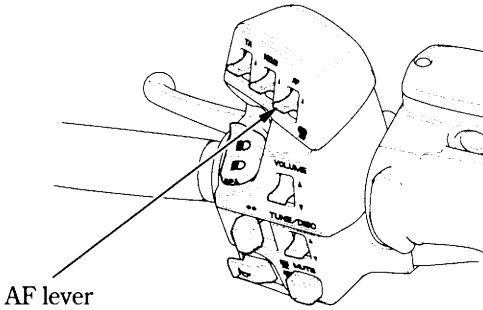

In some countries, you cannot utilize features provided by RDS as the RDS function is not provided in all stations.

Program Service Name Display

If the station you are listening to is an RDS station, the frequency display will disappear and the station name information will be displayed.

