
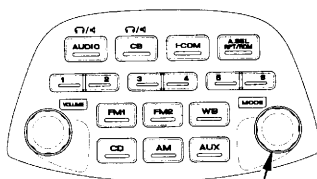


---

### Tone Control:

To select the Bass control, push the MODE knob once, and “BASS” will appear on the display. Then, within five seconds, change the bass control.

- To emphasize bass — turn the MODE knob clockwise.
- To reduce bass — turn the MODE knob counterclockwise.  
(Bass level ranges from 6 down to -6.)

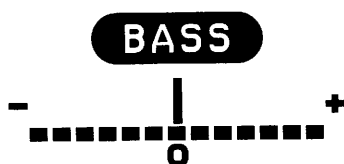

MODE knob

To select the Treble control, push the MODE knob two times, and “TREBLE” will appear on the display. Then, within five seconds, change the treble control.

- To emphasize treble — turn the MODE knob clockwise.
- To reduce treble — turn the MODE knob counterclockwise.  
(Treble level ranges from 6 down to -6.)

