

# MAINTENANCE

ITEMS	FREQUENCY	WHICHEVER → COMES	ODOMETER READING [NOTE (1)]								Refer to page	
			FIRST	× 1,000 km	1	6	12	18	24	30		36
			↓	× 1,000 mi	0.6	4	8	12	16	20		24
			NOTE	MONTH		6	12	18	24	30		36
* FUEL LINE					I		I		I	—		
* THROTTLE OPERATION					I		I		I	—		
* AIR CLEANER	2						R			R	—	
CRANKCASE BREATHER	3				C	C	C	C	C	C	141	
SPARK PLUGS										EVERY 24,000 km (16,000 mi) R	146	
* VALVE CLEARANCE										EVERY 24,000 km (16,000 mi) I	—	
ENGINE OIL				R		R		R		R	142	
ENGINE OIL FILTER				R		R		R		R	143	
RADIATOR COOLANT	4					I		I		R	148	
* COOLING SYSTEM						I		I		I	—	
* SECONDARY AIR SUPPLY SYSTEM						I		I		I	—	
FINAL DRIVE OIL						I		I		R	149	
BRAKE FLUID	4					I	I	R	I	I	R	31, 33
BRAKE PAD WEAR						I	I	I	I	I	I	159
BRAKE SYSTEM						I		I		I	I	160
* BRAKE LIGHT SWITCH						I		I		I	—	
* HEADLIGHT AIM						I		I		I	—	
CLUTCH SYSTEM						I		I		I	—	
CLUTCH FLUID	4					I	I	R	I	I	R	—
* REVERSE OPERATION						I		I		I	—	
SIDE STAND						I		I		I	—	
* SUSPENSION						I		I		I	—	
* NUTS, BOLTS, FASTENERS						I		I		I	—	
** WHEELS/TYRES						I		I		I	—	
** STEERING HEAD BEARINGS						I		I		I	—	