

MAINTENANCE

Engine Side Cover

Removal:

1. Carefully pull the rear of the engine side cover out until the prongs are clear of their securing slots.
2. Carefully slide the engine side cover to the rear until the hook is clear of the tab in the hole of the engine side cover.

Installation:

- Installation can be done in the reverse order of removal.

NOTICE

Failure to use extreme care removing or installing the side covers may damage the side cover hooks.

