

MAINTENANCE

License Light Bulb

1. Remove the license light lens by removing the two screws.
2. Pull out the bulb without turning.
3. Install a new bulb in the reverse order of removal.

