

Items	Pre-ride Check ➡ P. 37	Frequency*1									Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	4	8	12	16	20	24				
		× 1,000 mi	0.6	2.5	5	7.5	10	12.5	15				
Fuel Line				I	I	I	I	I	I	I	I		-
Fuel Level		I											30
Throttle Operation		I		I	I	I	I	I	I	I	I		64
Air Cleaner *2								R					47
Crankcase Breather *3				C	C	C	C	C	C	C	C		65
Spark Plug				I	R	I	R	I	R				66
Valve Clearance			I	I	I	I	I	I	I	I			-
Engine Oil		I	R	R	R	R	R	R	R	R	R		51
Engine Oil Strainer Screen							C				C		-
Engine Oil Centrifugal Filter							C				C		-
Engine Idle Speed			I	I	I	I	I	I	I	I	I		-

Maintenance Level

: Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.

: Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace if necessary)

L : Lubricate

R : Replace

C : Clean