


Clock (12-hour display)

To set the clock: P.25

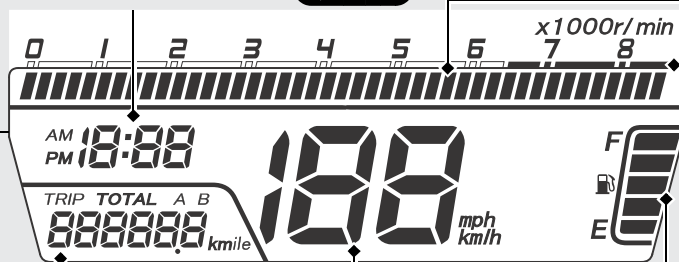

Tachometer

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone

(excessive engine rpm range)

Speedometer


Odometer [TOTAL] & Tripmeter [TRIP A/B]

A button switches between odometer & tripmeters at the ordinary display.

- Odometer: Total distance ridden.
- Tripmeter: Distance ridden since tripmeter was reset (press and hold B button to reset to 0.0 km/mile).

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing:
approximately 2.9 litres
(0.77 US gal, 0.64 Imp gal)

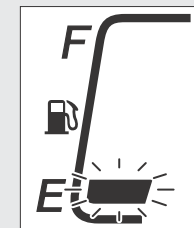

If the fuel gauge indicator repeat flashing or turned off: P.98