

Troubleshooting

Engine Will Not Start (HISS indicator stays on)	P. 93
Overheating (High coolant temperature indicator is on).....	P. 94
Warning Indicators On or Flashing	P. 95
Low Oil Pressure Indicator	P. 95
PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)	P. 95
ABS (Anti-lock Brake System) Indicator (NC700SA/SD only).....	P. 96

If the “-” Indicator is Blinking in the Gear Position Window While Riding.....	P. 97
Other Warning Indication	P. 98
Fuel Gauge Failure Indication	P. 98
Tyre Puncture.....	P. 99
Electrical Trouble	P. 107
Battery Goes Dead	P. 107
Burned-out Light Bulb	P. 107
Blown Fuse	P. 112