

Front brake

The scooter front brake is a hydraulic disc brake. As the brake pads wear, brake fluid level drops.

There are no adjustments to perform, but fluid level and pad wear should be inspected periodically. The system should be inspected frequently to ensure there are no fluid leaks. If the control lever free travel becomes excessive and the brake pads are not worn beyond the recommended limit (page 88), there is probably air in the brake system and it must be bled. See your authorized Honda dealer for this service.

Brake fluid level:

⚠ WARNING

- **Brake fluid may cause irritation. Avoid contact with skin or eyes. In case of contact, flush thoroughly with water and call a doctor if fluid gets in your eyes.**
- **KEEP OUT OF REACH OF CHILDREN.**

CAUTION

- **Handle brake fluid with care because it can damage plastic and painted surfaces.**
- **When topping up the fluid ensure that the reservoir is horizontal before removing the cap or fluid may spill out.**
- **Use only DOT3 or DOT4 brake fluid from a sealed container.**
- **Keep water or dirt out of the brake fluid tank.**