


ESSENTIAL COMPONENTS

IGNITION SWITCH

The ignition switch (1) is on the right side below the steering stem.

You should receive a key number plate (2) with your key.

You will need this key number if you ever have to replace a lost key. Store this plate in a safe place.

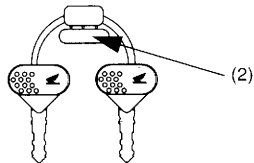

- (1) Ignition switch
- (2) Key number plate

| Key position | Function | Key removal |
|--------------|---|----------------------------|
| LOCK | Steering is locked. Engine and lights cannot be operated. | The key can be removed. |
| OFF | Engine and lights cannot be operated. | The key can be removed. |
| ON | Engine and lights can be operated. | The key cannot be removed. |