

To restart the engine

The engine is restarted by opening the throttle.

The engine will not restart unless you place your weight on the seat in proper posture.

Check that the engine is started.

When restarting on upgrade, be sure to release the brake lever after making sure that the engine starts to lug against the load imposed on it.

