

## BELT CASE AIR CLEANER


(See "Maintenance precautions" on page 75).

1. Remove lower center cover (page 43).



- (1) Center cover
- (2) Screw

2. Remove left side cover (page 44).

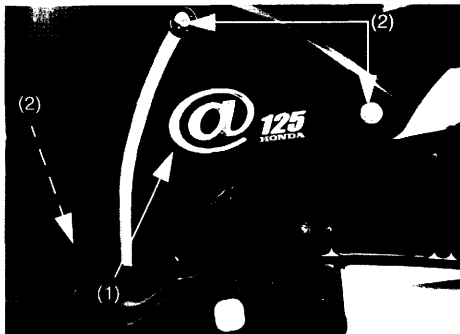

- (1) Side cover
- (2) Screws