

6. Wash and dry the scooter. Wax all painted surfaces.
7. Cover chromed parts with rust proof oil.
8. Inflate the tires up to the recommended standard pressure. Position the motorcycle on a support so that both wheels are off the ground.
9. Cover the scooter (do not use plastic or water proof material) and in an unheated, damp-free place with minimum temperature variations. Do not leave the scooter in direct sunlight.

AFTER STORAGE

1. Uncover and clean the scooter.
2. Install the battery. If the battery is low contact your Honda dealer who is equipped to recharge it for you.
3. Refill the fuel tank with fresh petrol.
4. Carry out all pre-ride inspection checks (page 52). Test ride the scooter at low speeds in a safe riding area away from traffic.