

I Starter Motor Operates But Engine Does Not Start


Check the following items:

- Check the correct engine starting sequence ➤ P. 25
- Check that there is gasoline in the fuel tank

If the problem continues, have your scooter inspected by your dealer.

I Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is RUN  position ➤ P. 22
- Check for a blown fuse ➤ P. 81
- Check for a loose battery connection or battery terminal corrosion ➤ P. 54
- Check the condition of the battery ➤ P. 78

If the problem continues, have your scooter inspected by your dealer.