

## ENGINE OIL

### Engine Oil Level Check


Check the engine oil level each day before riding the motorcycle.

The level must be maintained between the upper (2) and lower (3) level marks on the dipstick (1).

1. Start the engine and let it idle for a few minutes. Make sure the red oil pressure warning light goes off. If the light remains on, stop the engine immediately.
2. Stop the engine and put the motorcycle on its center stand on level ground.
3. After a few minutes, remove the oil filler cap/dipstick (1), wipe it clean, and reinsert the dipstick without screwing it in. The oil level should be between the upper (2) and lower (3) marks on the dipstick.
4. If required, add the specified oil up to the upper level mark (See page 58). Do not overfill.
5. Reinstall the oil filler cap/dipstick. Check for oil leaks.

### CAUTION:

\* Running the engine with insufficient oil pressure may cause serious engine damage.

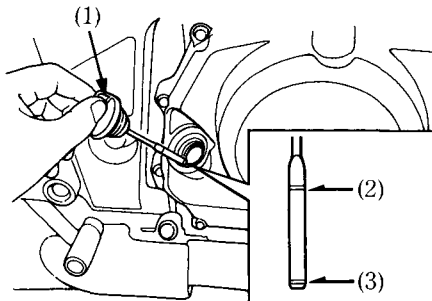

- (1) Filler cap/dipstick    (3) Lower level mark  
(2) Upper level mark