

## Fuel Tank

The fuel tank capacity including the reserve supply is:

16 ℓ (4.2 US gal , 3.5 Imp gal)

To open the tank cap (1), insert the key (2) and turn it clockwise. The cap will pop up and can be lifted off.

After refueling, be sure to tighten the tank cap firmly by turning it counterclockwise until the arrow (3) on the cap faces forward.


Use unleaded or low-lead petrol with a research octane number of 91 or higher. We recommend that you use unleaded petrol because it produces fewer engine and spark plug deposits and extends the life of exhaust system components.

### FOR AUSTRALIA ONLY:

Use unleaded petrol with a research octane number of 91 or higher.

## CAUTION:

\* If “spark knock” or “pinking” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your authorized Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.

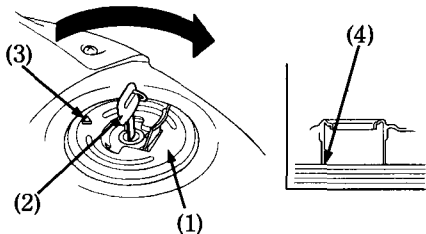

- (1) Fuel cap  
(2) Ignition key

- (3) Arrow  
(4) Filler neck