	FREQUENCY	WHICHEVER -		ODOMETER READING (NOTE 1)							
		COMES	×1,000 km	1	6	12	18	24	30	36	
		1	×1,000 mi	0.6	4	8	12	16	20	24	
	ITEM	NOTE	MONTHS		6	12	18	24	30	36	Refer to page
	FINAL DRIVE OIL					1		П		R	29, 78
	BRAKE FLUID	NOTE 3			1	ī	R	ı	1	R	18
	BRAKE PAD WEAR				ī	1	Ι	1	1	1	18-20, 86
	BRAKE SYSTEM					1		ı			18-20, 86
*	BRAKE LIGHT SWITCH							_		_	
*	HEADLIGHT AIM					1		-		7	
	CLUTCH SYSTEM					1		1		1	21
	CLUTCH FLUID	NOTE 3			1		R			R	21
	SIDE STAND					ı		1			87
*	SUSPENSION					Ī		Ī		Ī	
*	NUTS, BOLTS, FASTENERS			1		1					
**	WHEELS/TIRES					Ī				Ī	
**	STEERING HEAD BEARINGS					Ī				Ī	

- SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS
 AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.
- NOTES: 1. At higher odometer readings, repeat at the frequency interval established here.
 - 2. Service more frequently when riding in unusually wet or dusty areas.
 - 3. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
 - 4. Switzerland type only.