


ENGINE

SPARK PLUGS

Refer to Maintenance Precautions on page 64.

1. Remove the air duct/maintenance cover (page 66).
(Right side shown; left side similar).

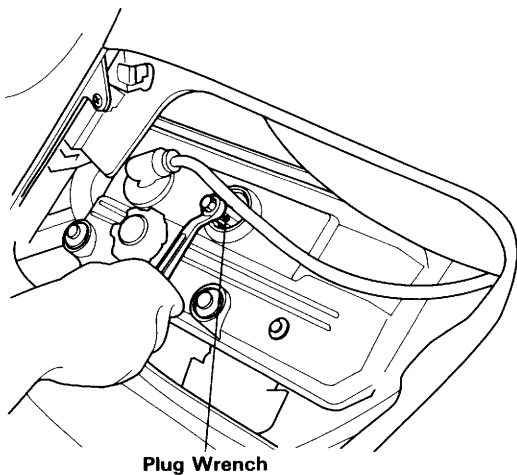

Plug Wrench