

---

## RIGHT HANDLEBAR CONTROLS

### Engine Stop Switch

The two position engine stop switch is next to the throttle grip. When the switch is in the ○ (RUN) position, the engine will operate. When the switch is in the ⊗ (OFF) position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the ○ (RUN) position.

#### NOTE:

- If your motorcycle is stopped with the ignition switch ON and the engine stop switch OFF, the headlight and taillight will still be on, resulting in battery discharge.

### Starter Button

The starter button is below the engine stop switch. When the starter button is pressed, the starter motor will crank the engine. If the engine stop switch is in the ⊗ (OFF) position, the starter motor will not operate.

See pages 49—50 for "Starting Procedure."

### Headlight Switch (Except U type)

The headlight switch has three positions, ☀, ☀☀ and "OFF" marked by dot.

☀: Headlight, taillight, position light and meter lights on.

☀☀: Position light, taillight and meter lights on.

OFF (dot): Headlight, taillight, position light and meter lights off.

