
FUEL TANK MAINTENANCE POSITION

The front of the fuel tank can be tilted up for maintenance.

The fuel tank does not require draining.

To raise:

1. Place the motorcycle on its center stand with the transmission in neutral and the ignition switch off.
2. Remove the seat (page 57).
3. Remove the fuel tank bolts and steering stem cap.
4. The seat adjuster is set in the maintenance position when the seat adjuster is slide the rear of the motorcycle.
5. Loosen the pivot bolt and slide the fuel tank to the rear of the motorcycle.

