
Battery Removal

The battery is located in the battery box behind the left side cover.

1. Remove the right side cover (page 89).
2. Remove the battery cover.
3. Disconnect the negative (-) terminal lead from the battery first.
4. Remove the battery holder by removing the bolt.
5. Disconnect the positive (+) terminal lead.
6. Pull the battery out of the battery box.

