

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
		↔	km	150	1000	2000		
			mi	100	600	1200		
		NOTE	HOURS	20	100	200		
REAR FINAL GEAR CASE OIL					(R:EVERY 2 YEARS)		109-110	
* BRAKE FLUID		NOTE 3					128-130	
* BRAKE SHOE WEAR		NOTE 1					139	
* BRAKE LIGHT SWITCH							140	
BRAKE SYSTEM							131-141	
* REVERSE LOCK SYSTEM							120	
SKID PLATES, ENGINE GUARD							149	
* CLUTCH SYSTEM							119	
* SUSPENSION							-	
* SPARK ARRESTER						C	C	127
* NUTS, BOLTS, FASTENERS							-	
** WHEELS/TYRES							-	
** STEERING SHAFT HOLDER BEARINGS							-	
** STEERING SYSTEM							-	

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.