

## WHEELS AND TYRES

### WHEEL REMOVAL

If you need to remove a wheel from your FOURTRAX, follow these procedures:

1. Raise the front (or rear) wheels off the ground and place a support securely under the vehicle.
2. Loosen the wheel nuts (Fig. 4-33) with a 17 mm socket wrench.
3. Remove the wheel.

When reinstalling a wheel, tighten the wheel nuts in a crisscross (rather than a circular) pattern.

Wheel nuts torque:

64 N·m (6.5 kgf·m , 47 lbf·ft)

Be sure the tapered side of the wheel nuts face the wheel rim (2).

### **WARNING**

#### POTENTIAL HAZARD

Installing wheels improperly.

#### WHAT CAN HAPPEN

A wheel may come loose, possibly leading to an accident.

#### HOW TO AVOID THE HAZARD

Carefully follow the instructions in this Owner's Manual when installing wheels.