



Indicators & Displays

1	Reverse indicator	Lights when the transmission is in reverse. <i>Lamp Check</i>
2	Neutral indicator	Lights when the transmission is in neutral. <i>Lamp Check</i>
3	PS (Electric Power Steering) indicator (TRX420FPE only)	Lights when there is an abnormality in the PS (Electric Power Steering) system. See page 36 . <i>Lamp Check.</i>
4	4WD indicator (Except TRX420TE)	Lights when the 4WD drive mode engages. <i>Lamp Check.</i>
5	High coolant temperature indicator	Lights when coolant temperature is high enough to adversely affect the service life of the engine. If the high coolant temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 196. <i>Lamp Check.</i>
6	PGM-FI indicator	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON (I). If the indicator comes on at any other time, reduce speed and take your vehicle to a Honda dealer as soon as possible. <i>Lamp Check.</i>

