

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		↔	km	150	1000	2000	
			mi	100	600	1200	
		NOTE	HOURS	20	100	200	
* FUEL LINE					I		—
* THROTTLE OPERATION					I		130
AIR CLEANER	NOTE 1				C	C	124
AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	129
SPARK PLUG					I	I	134
* VALVE CLEARANCE				I	I	I	137
ENGINE OIL				INITIAL= 150 km (100 mi), 20 operating hours or 1 month: R REGULAR= Every 1,000 km (600 mi), 100 operating hours or 12 months: R			105
ENGINE OIL FILTER				R	R	R	110
RADIATOR COOLANT	NOTE 3				I	I	118
* COOLING SYSTEM	NOTE 2				I	I	—

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.