
Maintenance Component Locations

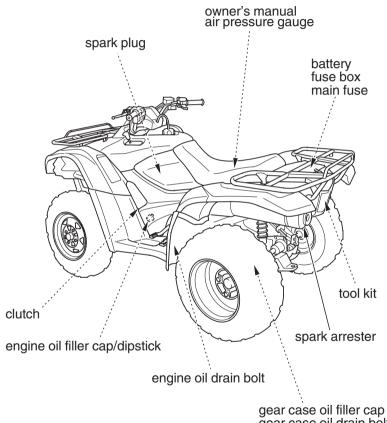

gear case oil filler cap gear case oil drain bolt