

### Gear Position Indicator

The gear position indicator (1) (Fig. 2-16) shows the gear position when the ignition switch is in the ON ( I ) position and the engine is running.

The indicator displays: N for neutral, R for reverse, and 1–5 for the five forward speed gears.

When the engine is stopped, the indicator will display: N, R, 1, “---” (if the transmission is in 2nd, 3rd, or 4th gear), or 5.

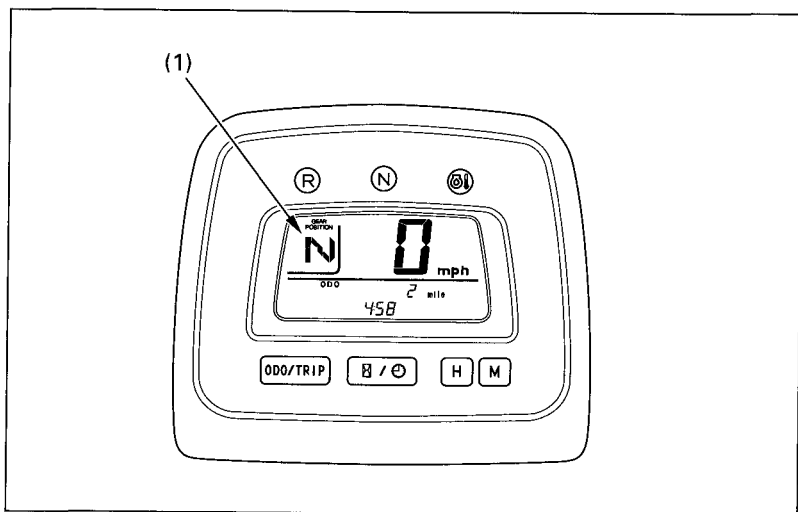


Fig. 2-16 (1) Gear position indicator