

	FREQUENCY	Which ever comes first	INITIAL		REGULAR		Refer to page	
			ITEMS	MAINTENANCE		MAINTENANCE INTERVAL		
				mi	100	600		1200
				km	150	1000		2000
NOTE	HOURS	20	100	200				
NON EMISSION RELATED ITEMS	DRIVE SHAFT BOOTS						—	
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2YEARS)		117 – 119	
	* BRAKE FLUID	(NOTE3)					134	
	* BRAKE SHOE WEAR	(NOTE1)					139	
	BRAKE SYSTEM						131 – 140	
	* REVERSE LOCK SYSTEM						123	
	SKID PLATES, ENGINE GUARD						147	
	* CLUTCH SYSTEM						122	
	* SUSPENSION						—	
	* SPARK ARRESTER				C	C	148	
	* NUTS, BOLTS, FASTENERS						—	
	** WHEELS/TIRES						141 – 145	
	** STEERING SHAFT HOLDER BEARINGS						—	
	** STEERING SYSTEM						—	

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.