

# Is Your ATV Ready to Ride?

---

Check these items after you get on the ATV:

- |  |   |
|--|---|
| <i>Throttle</i>                                      | Check the freeplay and adjust if needed. Press the throttle to make sure it moves smoothly without sticking, and snaps shut automatically when it is released, in all steering positions (page 114 ). |
| <i>Brakes</i>  | Squeeze the front brake lever and step on the rear brake pedal to check that the controls operate normally. Make sure there is no brake fluid leakage (page 135 ).                                    |
| <i>Clutch Lever/<br/>Parking Brake<br/>Lever</i>     | Check for smooth operation and adjust if needed (page 116 ).  |
| <i>Headlight and<br/>Headlight Dimmer<br/>Switch</i> | Check for proper function (page 22 ).   |
| <i>Engine Stop<br/>Switch</i>                        | Check for proper function (page 21 ).   |
| <i>Steering</i>                                      | Check that the wheels turn properly as you steer the handlebar. Move the handlebar right and left and check that there is no excessive backlash.  |

Remember, be sure to take care of any problem you find, or have your Honda dealer correct it before you ride.