

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		km	mi	150	1000	2000	
		⇔	mi	100	600	1200	
		NOTE	HOURS	20	100	200	
DRIVE CHAIN		NOTE 1,2		I, L	I, L EVERY 500 km (300 mi) or 50 operating hours		152
DRIVE CHAIN SLIDER							154
* BRAKE FLUID		NOTE 3					134
* BRAKE PADS WEAR		NOTE 1,2					138
* BRAKELIGHT SWITCH							141
BRAKE SYSTEM							134
SKID PLATES, ENGINE GUARD							151
* CLUTCH SYSTEM							116
* SUSPENSION							128
* SPARK ARRESTER					C	C	126
* NUTS, BOLTS, FASTENERS							—
** WHEELS/TYRES							—
** TIE-ROD AND JOINT BOOTS							—
** STEERING SHAFT HOLDER BEARINGS							—
** STEERING SYSTEM							—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.