

# Engine Oil & Filter

---

4. Reinstall the oil filter cover, making sure the bolts are tightened to the specified torque:  
12 N·m (1.2 kgf·m , 9 lbf·ft)
5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 178 ).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

### *Add Engine Oil:*

1. Check that the drain plug sealing washer is in good condition. If necessary, replace the sealing washer.
2. Reinstall the engine oil drain plug and tighten it to the specified torque:  
25 N·m (2.5 kgf·m , 18 lbf·ft)
3. Fill the crankcase with the recommended grade oil approximately:  
0.69 ℓ (0.73 US qt , 0.61 Imp qt)
4. Reinstall the engine oil filler cap.
5. Start the engine and let it idle for 3–5 minutes.
6. Stop the engine, wait 2–3 minutes and check the engine oil level. Make sure the engine oil level is at the upper level mark in the inspection window with the ATV upright on firm, level ground. If necessary, add more oil but do not overfill.
7. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.