



Indicators & Displays

Gear Position Indicator



The gear position indicator (1) shows the gear position when the ignition switch is in the ON (I) position.

The indicator displays: N for neutral, R for reverse, D for drive, L for low, and 1 – 5 for the five forward positions in the ESP mode.

“- -” will be displayed on the gear position indicator when the transmission is not shifted into gear properly. Before riding, check that the gear position is properly displayed on the gear position indicator.

TRX500FA

TRX500FGA/FPA

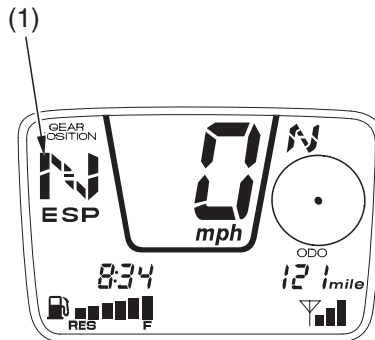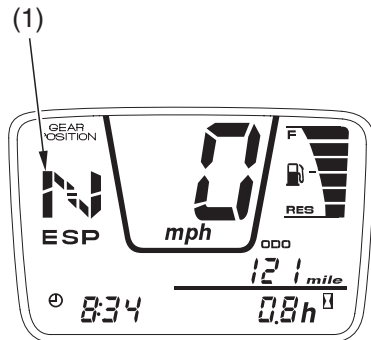

(1) gear position indicator