



Indicators & Displays

(For TRX500FGA/FPA)

- To change the display from hourmeter to digital clock, press and release the digital clock/hourmeter select button (1).

To adjust the time manually, proceed as follows:


1. Turn the ignition switch ON (1).
2. Press and hold the digital clock/hourmeter select button for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.
3. To advance the hour display one unit at a time, press and release the plus button (2) or minus button (3).

To advance the hour display automatically, press and hold the plus button or minus button. After 2 seconds, the hour display will begin advancing. Release the button when the display reaches the desired hour.



TRX500FGA

TRX500FPA

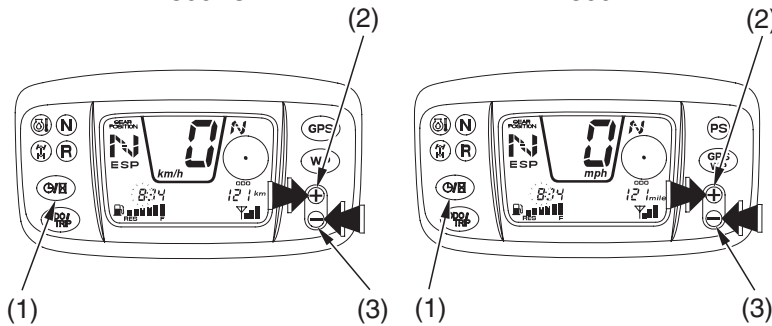

(1) digital clock/hourmeter
select button

(3) minus button

(2) plus button

