





Indicators & Displays

- Press the digital clock/hourmeter select button when the display reaches the desired hour appears. The minutes display will be flashing.

TRX500FGA

TRX500FPA

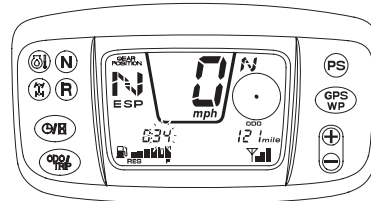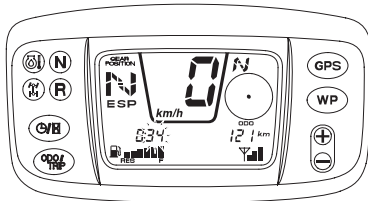

- To advance the minute display one unit at a time, press and release the plus button or minus button.
To advance the minute display automatically, press and hold the plus button or minus button. After 2 seconds, the minute display will begin advancing. Release the button when the display reaches the desired minute.
- Press the digital clock/hourmeter select button when the display reaches the desired minutes appears. The display will stop flashing.
 - Your ATV's digital clock has an automatic adjustment function whenever the GPS mode is selected and the system's satellite status is 3D Navigation (page 89).

