



GPS Mode

There are two methods for marking waypoints.


- Basic (to select your current position)
- Advanced (to input desired destinations)

Basic Waypoint Selection

To Mark Your Present Position:

(For TRX500FGA)

1. Turn the ignition switch ON (1).
2. Use the GPS button to select the GPS mode (page 65).
3. To select a higher waypoint number (1), press and release the plus button (2).
To select a lower waypoint number, press and release the minus button (3).
To fast scroll, press and hold the plus or minus button until the desired waypoint number appears.
4. Press and hold the WP button (4) for about 2 seconds, until the waypoint number and waypoint distance (5) flash. Then release the button.

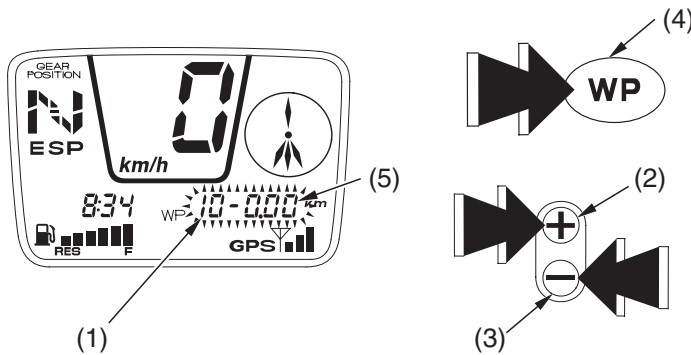

- | | |
|---------------------|-----------------------|
| (1) waypoint number | (4) WP button |
| (2) plus button | (5) waypoint distance |
| (3) minus button | |

