

Coolant temperature gauge ()

- Above 122 °C:
 - High coolant temperature indicator lights
 - 5th (H) segment flashes
- ▶ Even if the engine coolant temperature is low, the cooling fan may start running when you rev up the engine. This is normal.

Backlight brightness adjustment P.25

Gear position indicator

Shows 1st to 6th gear position.

Odometer [TOTAL] & Tripmeter [TRIP A/B]

TOTAL/TRIP button switches between odometer & tripmeters.

- Odometer: Total distance ridden.
- Tripmeter: Distance ridden since tripmeter was reset (press and hold **TOTAL/TRIP** button to reset to 0.0 km/mile. At the same time reset the average fuel mileage).