

### Ignition Switch

Switches the electrical system on/off, locks the steering.

- ▶ Key can be removed when in the OFF or LOCK position.

**Steering Lock**  **P.35**

### AT/MT Switch


To shift between the AT MODE and MT MODE.

 **P.44**

### Engine stop switch

Should normally remain in the RUN  position.

- ▶ In an emergency, switch to the OFF  position to stop the engine.

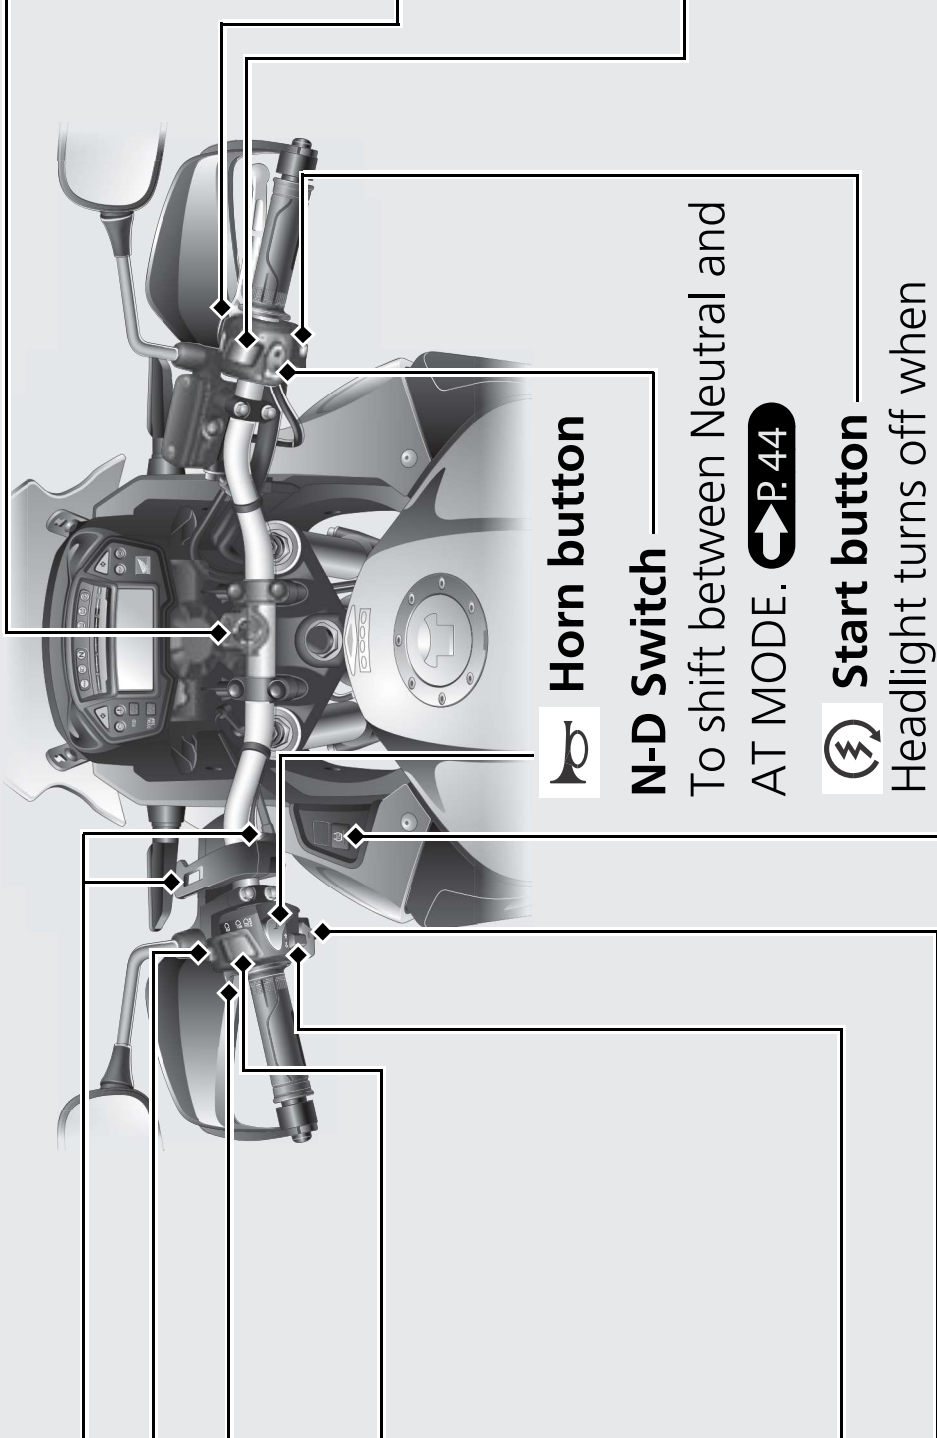

### Horn button

### N-D Switch

To shift between Neutral and AT MODE.  **P.44**



### Start button

Headlight turns off when operating the starter motor.



### TCS (Traction Control System) OFF switch

Press and hold to turn the TCS on and off.

- ▶ The TCS OFF indicator comes on when TCS is turned off.