

# Troubleshooting

<b>Engine Will Not Start (HISS indicator stays on)</b> .....	P. 91
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 92
<b>Warning Indicators On or Flashing</b> .....	P. 93
Low Oil Pressure Indicator .....	P. 93
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL) .....	P. 93
ABS (Anti-lock Brake System) Indicator .....	P. 94
TCS (Traction Control System) Indicator .....	P. 95
<b>Other Warning Indications</b> .....	P. 96
<b>If the “-” Indicator is Blinking in the Gear Position Window While Riding</b> .....	P. 97
<b>Tyre Puncture</b> .....	P. 98
<b>Electrical Trouble</b> .....	P. 105
Battery Goes Dead .....	P. 105
Burned-out Light Bulb .....	P. 105
Blown Fuse .....	P. 109