


Other Adjustments ► Adjusting the Brakelight Switch

Adjusting the Brakelight Switch

Check the operation of the brakelight switch. Turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

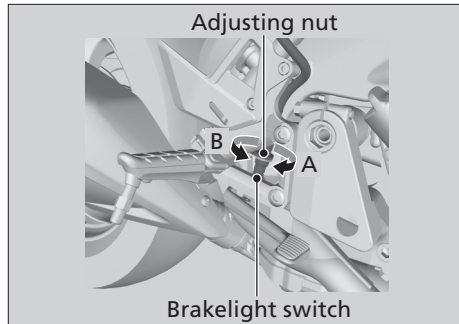

Adjusting the Idle Speed

The engine must be at normal operating temperature for accurate idle speed adjustment. 10 minutes of stop-and-go riding is sufficient.

1. Warm up the engine, shift to neutral and place your motorcycle on the side stand on a level surface.
2. Adjust idle speed with the throttle stop screw.

Idle speed (In neutral):

1,200 ± 100 rpm

