

Fuel Tank


Fuel tank capacity is 13 ℓ (3.4 US gal) including 2.2 ℓ (0.6 US gal) in the reserve supply.

To open the fuel tank cap (2), open the tank cap cover, insert the ignition key (1) and turn it clockwise. The cap will pop up and can be lifted off.

Use low-lead or unleaded gasoline with an Octane number of 91 or higher. For NEW SOUTH WALES: Use unleaded fuel with an research octane number of 91 or higher. If “knocking” or “pinging” occurs, try a different brand of gasoline or a higher octane grade.

CAUTION:

- * *Should knocking or pinging persist while holding a steady speed on a level road, try changing brands of gasoline. If knocking or pinging still persists, consult your authorized Honda dealer.*

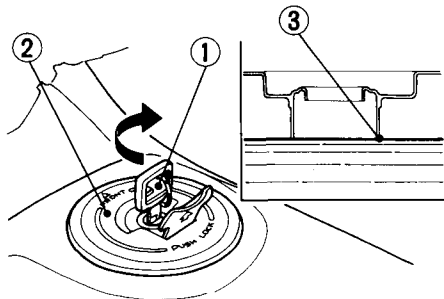

- (1) Ignition key
(2) Fuel tank cap

- (3) Filler neck