


## SEAT

### Removal:

1. Insert the ignition key into the seat lock (2) and turn it clockwise.
2. Pull the center of the seat (1) up and then back until L-hooks (3) disengage. ... (A)
3. Remove the seat by lifting the rear of the seat. ... (B)

### Installation:

1. Engage the L-hooks (3) with the seat stoppers (4). ... (C)
2. Push the seat forward, insert the prong (6) into the recess (7) under the frame cross member and press down on the rear of the seat until the U-hook (5) engage. ... (D)

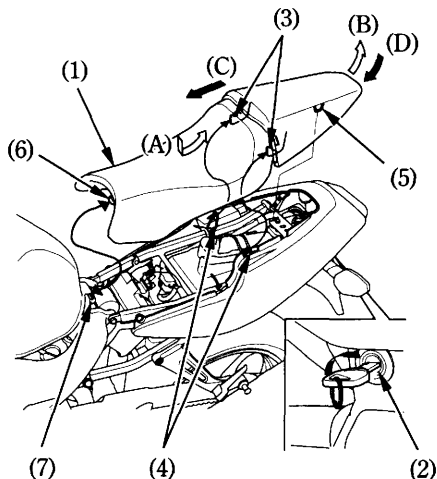

- |               |                   |
|---------------|-------------------|
| (1) Seat      | (4) Seat stoppers |
| (2) Seat lock | (5) U-hook        |
| (3) L-hooks   | (6) Prong         |
|               | (7) Recess        |