



Battery Removal

The battery (4) is in the battery box below the seat.

1. Remove the seat (page 53).
2. Open the battery box cover (1).
3. Disconnect the negative (-) terminal lead (2) from the battery first, then disconnect the positive (+) terminal lead (3).
4. Pull out the battery (4) from the battery box.

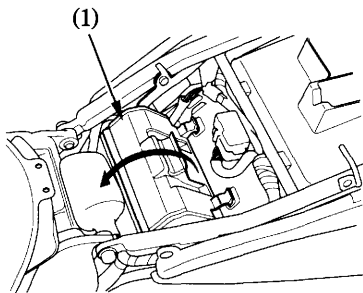

(1) Battery box cover

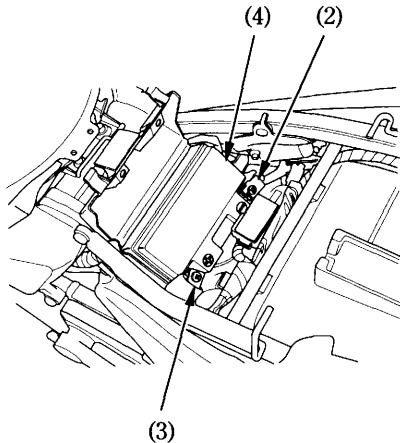

- (2) Negative (-) terminal lead
- (3) Positive (+) terminal lead
- (4) Battery