


Fuel Tank

The fuel tank capacity including the reserve supply is:

25 l (6.6 US gal , 5.5 Imp gal)

To open the fuel fill cap (1), open the tank cap cover (2), insert the ignition key (3) and turn it clockwise. The fuel fill cap will pop up and can be lifted off.

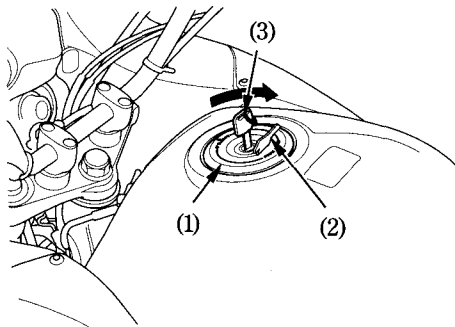

(1) Fuel fill cap
(2) Tank cap cover

(3) Ignition key

To close the fuel fill cap, align the latch in the fuel fill cap with the solt in the filler neck.

Push fuel fill cap into the filler neck until it snaps closed and locks. Remove the key and close the tank cap cover.

Use unleaded or low-lead petrol with a research octane number of 91 or higher. We recommend that you use unleaded petrol because it produces fewer engine and spark plug deposits and extends the life of exhaust system components.

FOR AUSTRALIA ONLY:

Use unleaded petrol with a research octane number of 91 or higher.

CAUTION:

* If “spark knock” or “pinking” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.