


## SIDE COVER

### Removal:

1. Remove the bolts (1).
2. While pulling the front under side of the rear cowl (2), pull the front of the side cover (3).
3. Release the A tab (4) from the slit (5) on the side cover.
4. Slide the side cover to the front until the cover is released from the B tab (6).

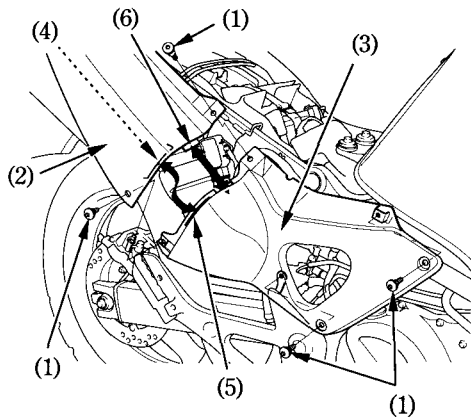

- |                |           |
|----------------|-----------|
| (1) Bolts      | (4) A Tab |
| (2) Rear cowl  | (5) Slit  |
| (3) Side cover | (6) B Tab |