High Air Temperature

35°C (95°F) or above

- 1. Do not use the choke.
- 2. Keep the throttle fully closed.
- 3. Start the engine following step 3 under "Normal Air Temperature".

If the engine fails to restart:

- 1. Pull the decompression lever (page 46) in, open the throttle fully, turn the engine stop switch to 🕱 (OFF) and operate the kickstarter pedal several times to clear the engine. Release the decompression lever. Turn the engine stop switch to O (RUN).
- 2. Start the engine following step 2 under "Normal Air Temperature".

Low Air Temperature

10°C (50°F) or below

- 1. Follow steps 1 3 under "Normal Air Temperature."
- 2. Warm up the engine by opening and closing the throttle slightly.
- 3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke lever (1) down all the way to fully OFF (C).