

| ITEMS | FREQUENCY | WHICHEVER → COMES FIRST ↓ NOTE | → INITIAL MAINT. | REGULAR MAINT. INTERVAL | | | | Refer to page | | |
|-------|------------------------|--|------------------------|--|-----|----|----|------------------|----|----|
| | | | | x100km | 1.5 | 10 | 20 | | 30 | 40 |
| | | | | x100mi | 1 | 6 | 12 | | 18 | 24 |
| | | MONTH | 1 | 6 | 12 | 18 | 24 | | | |
| | BRAKE FLUID | NOTE 2 | | I | I | I | I | 24,26 | | |
| | BRAKE PAD WEAR | | | I | I | I | I | 79 | | |
| | BRAKE SYSTEM | | I | I | I | I | I | 24-26 | | |
| | BRAKE LIGHT SWITCH | | | | I | | I | 88 | | |
| * | HEADLIGHT AIM | | | | I | | I | - | | |
| | CLUTCH SYSTEM | | I | I | I | I | I | 27-28 | | |
| | SIDE STAND | | | | I | | I | 87 | | |
| * | SUSPENSION | | | | I | | I | 84,85 | | |
| * | SPARK ARRESTER | | | C: every 1,600 km (1,000 mi) or every 100 operating hours | | | | 72 | | |
| * | NUTS, BOLTS, FASTENERS | | I | | I | | I | - | | |
| ** | WHEEL/TIRES | | I | I | I | I | I | 35,86 | | |
| ** | STEERING HEAD BEARINGS | | I | | I | | I | - | | |

- * SHOULD BE SERVICED BY YOUR HONDA DEALER, UNLESS THE OWNER HAS THE PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR HONDA DEALER.

NOTE: 1. Service more frequently when ridden in wet or dusty conditions.
2. Replace every 2 years. Replacement requires mechanical skill.