


To reset tripmeter B, average fuel mileage, fuel consumption, average speed and elapsed time (these are based on tripmeter B) together, press and hold the **MODE** button while tripmeter B is displayed.

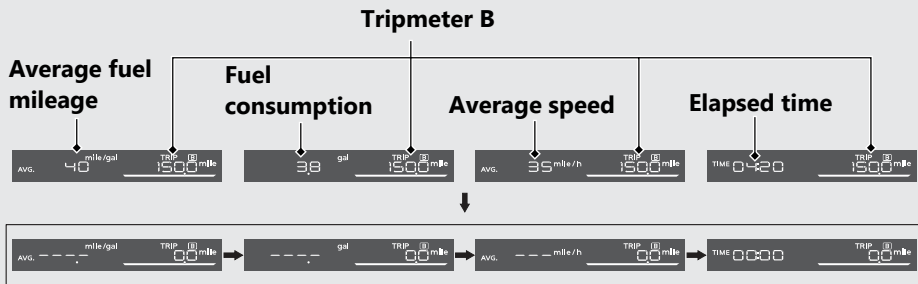

Then, the display returns to the last selected indication.