



← **Left turn signal indicator**

 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned to the ON position with the engine stop switch in the  (Run) position. Comes on when the ignition switch is turned to the ON position with the engine stop switch in the  (Stop) position

**If it comes on while engine is running:**

➔ **P.124**

➔ **Right turn signal indicator**

 **Neutral indicator**

Comes on when the transmission is in Neutral.